



■ Dimensional Definition

Moulded Tubeboard Typ „PP“

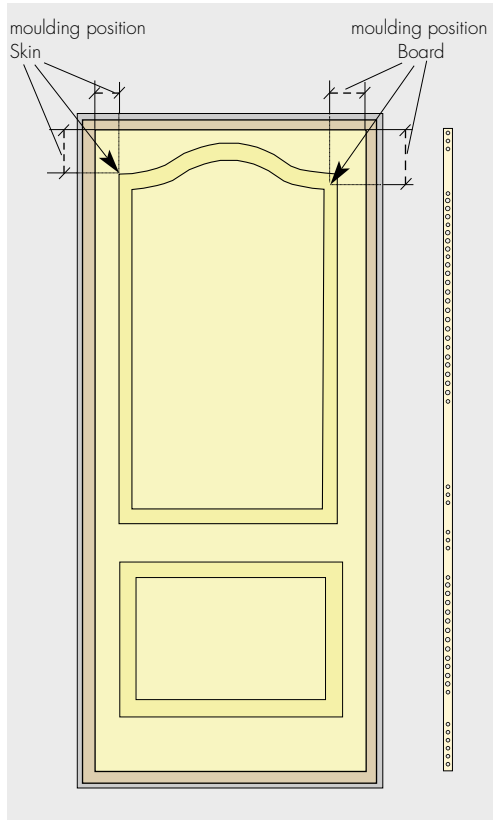

Detail (scale 1:2)

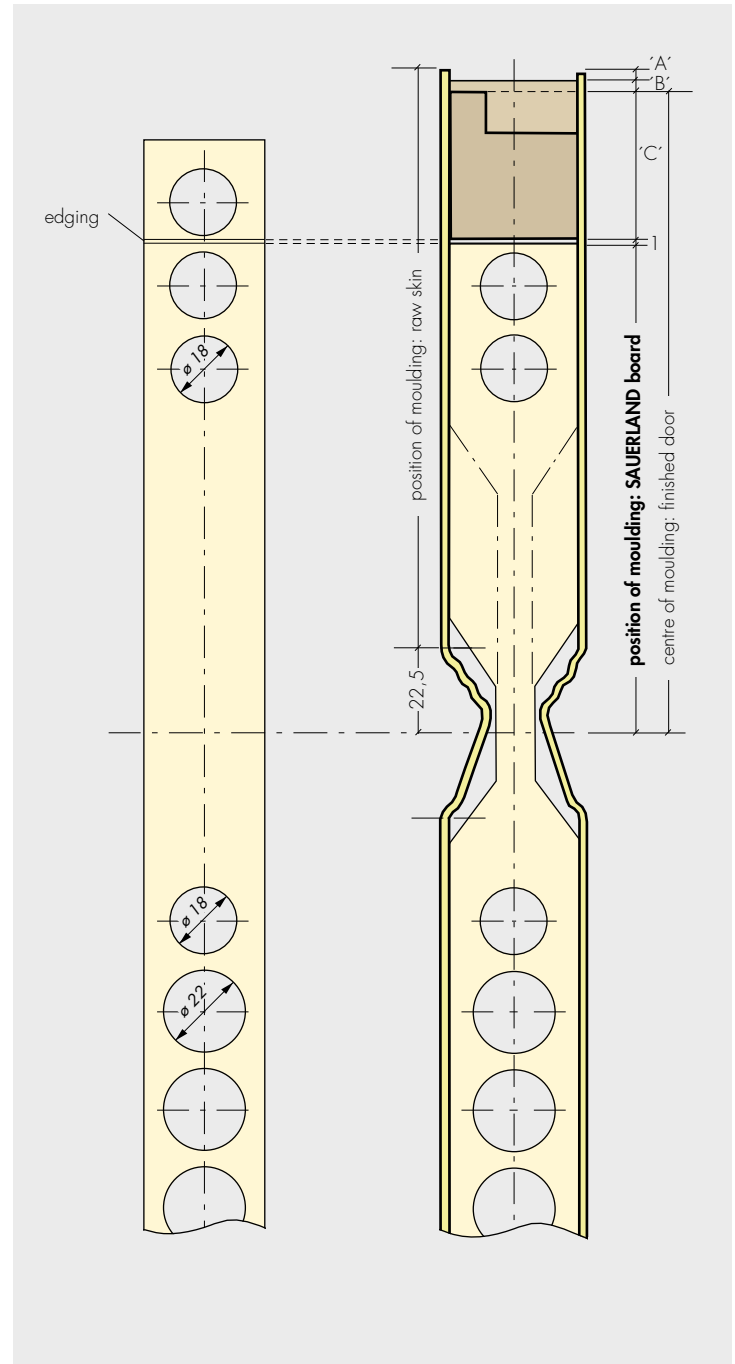

Calculation of moulding position

$$\begin{aligned} & \text{Position on skin} \\ & + 22,5 \text{ mm} \\ & - ('A' + 'B' + 'C') \\ & - 1 \text{ mm} \end{aligned}$$

=Position of moulding on SAUERLAND board

- Skin : upper edge of moulding
- 'A' : edging oversize skin
- 'B' : edging oversize frame
- 'C' : finished size frame

The position of the edging cut is to be calculated from the center of the moulding upwards.